


The remotes and base station communicate via Radio Frequency (RF) technology. Other equipment in your facility may also use RF technology. If there is any interference from the other equipment, you may decide to change the RF channel that is used by the remotes and base station.

Change RF Channel on Base Station

- A. From the Player Admin ribbon select **Input Devices**
- B. Select a new channel from the **RF Channel** drop-down (1 is the default channel)
- C. Select **OK**

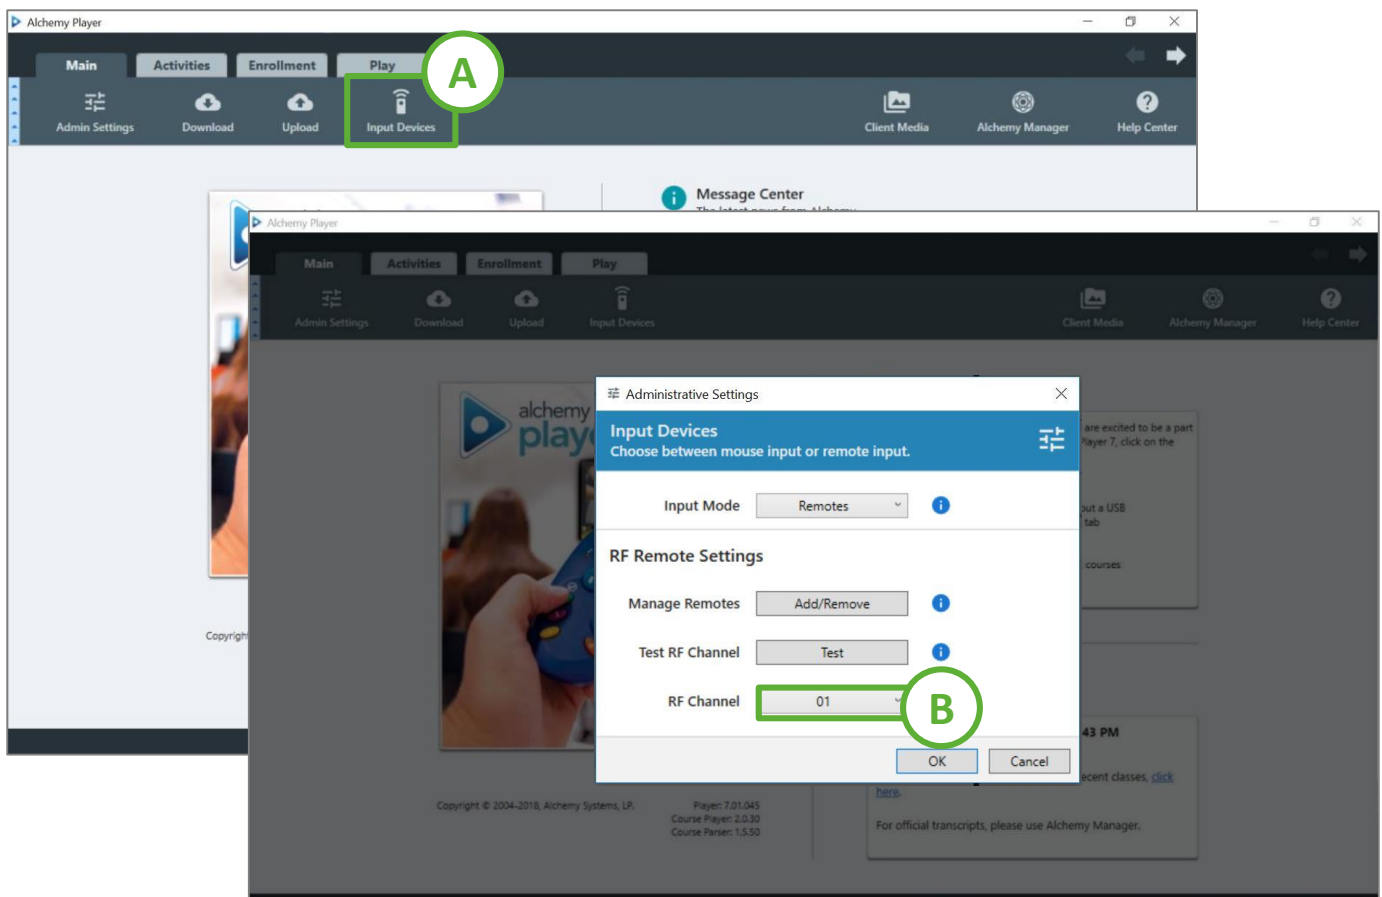

Reset Remote Controls

- A. On the remote control, hold down buttons 1 & 5 simultaneously for 3-5 seconds
 - Wait until all three lights blink